## EX-90070/90072 Power Supply AC/DC PC/104 Module Power Supply DC/DC + DIO PC/104 Module

### User's Manual

(Version 3.2)

### Table of Contents

Chapter 0	Packing List	1
Chapter 1	Specifications	2
Chapter 2	Jumper Settings	6
Chapter 3	Connectors	7
Chapter 4	Digital I/O	8
Warranty		10

iii

# Chapter 0 Packing List

Function	Function	Package
		<ul> <li>EX-90070 Power Supply Module</li> </ul>
EX-90070	Power Supply AC/DC Module	• 3 Pin extend cable x 1
		EX-90072 Power Supply Module
EX-90072	Power Supply DC/DC with 24- Bit DIO Module	

1

# Chapter 1

### **Specifications**

Features	EX-90070						
Power	Input voltage range : 90 ~ 264 VAC						
	Output voltage :	+5 VDC @ 2A,					
		-5 VDC @ 0.2 A,					
		+12 VDC @ 1 A,					
		-12 VDC @ 0.3 A					
	Input frequency : 47	~ 63 Hz					
	Inrush current cold : 20A @ 110VAC, 40A @ 220 VAC						
	Hold-up time:16 ms						
	Raise time: 500 ms						
	Overload protection: power limit						
	Short protection : auto-recovery						
	MOSFET design						
	Built-in line filter						
	Meets FCC, CE, TÜV						
	Meets UL478 and CS						
	Fast type FUSE 2A/250V						
Connector	3-pin AC input						
	6-pin DC output (-5	V,-12V,+12V,GND,GND,+5V)					
Bus Interface	PC/104 standard co	ompliant					
Dimensions	90 (L) x 96 (W) mm						
Weight	90 g						
Operating Temperature	0 ~ +60 °C						


PC/104 Power Supply User's Manual

Features	EX-90072				
Digital I/O	24 bit digital I/O lines (1 group)				
	Group emulates a 8225 PPI mode 0				
	Buffered circuits for higher driving capacity than 8255				
	Output status read back				
	Pin-compatible with OPTO-22 I/O module racks				
	Transfer rate: 300 KB/sec. (typical)				
	Digital output:Logic level 0: 0.5 V max. @ 24 mA sink				
	Logic level 1: 2.0 V min. @ 15 mA source				
	Digital input: Logic level 0: 0.8 V max.				
	Logic level 1: 2.0 V min.				
Power	Input Voltage: +8V ~ +48V DC				
	Output Voltage: 5V DC / 3A				
	Over load protection				
	Over heat protection				
	Converted frequency: 52 KHz				
	Converted effect: Over 80%				
	Suitable for auto / truck system				
Bus Interface	PC/104 standard compliant				
Dimensions	90 (L) x 96 (W) mm.				
Weight	110 g				
Operating Temperature	-20 ~ +60 °C				

1	٦
	1
•	-

### **Component Location**


EX-90070

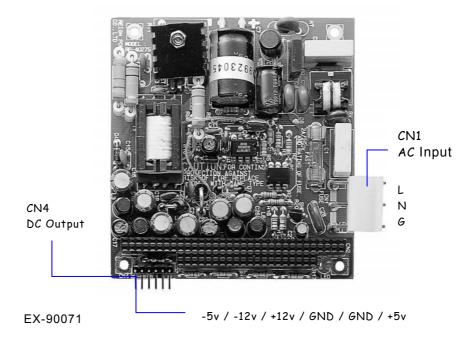

4

### **Component Location**

EX-90072

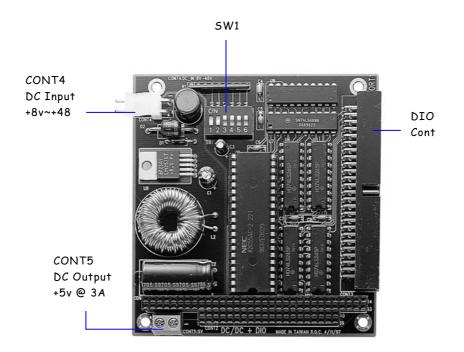



### Chapter 2 Jumper Setting

The EX-90072 occupies 8 consecutive I/O locations. Dip-switch SW1 sets the base address for the EX-90072. Be careful when selecting the base address as some settings can conflict with existing PC ports. The following table shows common examples that usually will not cause a conflict.

Address	1	2	3	4	5	6
000-00Fh	ON	ON	ON	ON	ON	ON
010-01Fh	ON	ON	ON	ON	ON	OFF
020-02Fh	ON	ON	ON	ON	OFF	ON
030-03Fh	ON	ON	ON	ON	OFF	OFF
200-20Fh	OFF	ON	ON	ON	ON	ON
210-21Fh	OFF	ON	ON	ON	ON	OFF
300-30Fh *	OFF	OFF	ON	ON	ON	ON
3F0-3FFh	OFF	OFF	OFF	OFF	OFF	OFF

Base Address Setting (SW1) (EX-90072)

PC/104 Power Supply User's Manual

## Chapter 3 Connectors

Connector	EX-90070	EX-90072		
CONTI	AC Input			
CONT2				
CONT3		Digital I/O Group 1		
CONT4	DC Output	8-48VDC Input		
CONT5		5VDC Output		

### EX-90072 CONT3

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	AIO23/PARTC	2	GND
3	AIO22/PARTC	4	GND
5	AIO21/PARTC	6	GND
7	AIO20/PARTC	8	GND
9	AIO19/PARTC	10	GND
11	AIO18/PARTC	12	GND
13	AIO17/PARTC	14	GND
15	AIO16/PARTC	16	GND
17	AIO15/PARTB	18	GND
19	AIO14/PARTB	20	GND
21	AIO13/PARTB	22	GND
23	AIO12/PARTB	24	GND
25	AIO11/PARTB	26	GND
27	AIO10/PARTB	28	GND
29	AIO9/PARTB	30	GND
31	AIO8/PARTB	32	GND
33	AIO7/PARTA	34	GND
35	AIO6/PARTA	36	GND
37	AIO5/PARTA	38	GND
39	AIO4/PARTA	40	GND
41	AIO3/PARTA	42	GND
43	AIO2/PARTA	44	GND
45	AIO1/PARTA	46	GND
47	AIO0/PARTA	48	GND
49	VCC	50	GND

### Chapter 4 Digital I/O (EX-90072)

#### **Mode 0 Operation**

Mode 0 operation provides simple input and output operation for each of the three ports. No handshaking is required, data is simply written to or read from a specific port.

Mode 0 Basic Functional Definitions:

- Three 8-bit ports
- Any port can be input or output
- Outputs are latched
- Inputs are not latched

#### I/O port Assignments

Location	Write	Read
BASE+0	A0	A0
BASE+1	B0	В0
BASE+2	CO	C0
BASE+3	Mode Register for A0,B0,C0	N/A

#### 8255 Data Registers

#### Base+0 Port A0 (read/write) Bit 7 6 5 4 3 2 1 0 PA07 PA06 PA05 PA04 PA03 PA02 PA01 PA00 Value

PC/104 Power Supply User's Manual

Base+1 Port B0			30	(rea	d/write	)		
Bit	7	6	5	4	3	2	1	0
Value	PB07	PB06	PB05	PB04	PB03	PB02	PB01	PB00

Base+2		Port C	0	(rea	d/write	)		
Bit	7	6	5	4	3	2	1	0
Value	PC07	PC06	PC05	PC04	PC03	PC02	PC01	PC00

n			2		
в	ลร	et	5		

#### Port A0.B0.C0 (write)

Bit	7	6	5	4	3	2	1	0
Value	1	0	0	PA0	РСН	0	PB0	PCL

PA0 = 0 => Port A0 is output

PA0 = 1 => Port A0 is input

PB0 = 0 => Port B0 is output

PB0 = 1 => Port B0 is input

PCL = 0 => Port C0 Low Nibble is output (Bit0-3)

PCL = 1 => Port C0 Low Nibble is input (Bit0-3)

PCH =0 => Port C0 High Nibble is output (Bit4-7)

PCH =1 => Port C0 High Nibble is input (Bit4-7)

# After power-on or reset of the module the A0, B0 and C0 ports are default set to input mode.

### Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working orderat any time during this period, we will, at our option, replace or repair it at noadditional charge except as set forth in the following terms. This warranty doesnot apply to products damaged by misuse, modifications, accident or disaster. Vendor assumes no liability for any damages, lost profits, lost savings or anyother incidental or consequential damage resulting from the use, misuse of, orinability to use this product. Vendor will not be liable for any claim made by anyother related party. Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

PC/104 Power Supply User's Manual